



DANGERBUDDIES®

Your Partner in Adventure!

S-Curve Camera Strap

Thank you for your purchase of the S-Curve Camera Strap! This strap is designed by Danger Buddies in Wisconsin, drawing on our experience in drop protection and on-wall rock climbing photography gear, featuring:

- Ergonomic around-the-neck S-Curve design
- Fully adjustable length
- Integrated storage pocket for batteries, cash/credit card, keys, memory cards or a snack
- Padded design for all-day comfort
- Climbing-inspired carabiner connector
- Gasketed stainless steel camera connector - the same as used on our drop-protection camera bag



Usage Instructions

- Thread the D-ring screw into your camera's tripod mount. The screw should be tight enough to compress the rubber gasket slightly. The gasket will help prevent loosening of the screw.
- Place the camera strap over your shoulder. Most users prefer to wear it on their right shoulder and place their left arm through the strap, so that the strap hangs cross-body. In this configuration, the D-ring would sit on your left hip.
- Unlock the camera strap carabiner by sliding the locking mechanism towards the strap end of the carabiner. Insert the carabiner through the D-ring on the camera and re-lock the carabiner by sliding the locking mechanism towards the tip of the carabiner. To prevent accidental disengagement of the carabiner from the D-ring, always ensure the carabiner is in the locked position when using the camera strap.
- The camera should hang upside down in a comfortable position over your left hip. You can adjust the position of the camera by tightening or loosening the strap buckle.
- To use the camera, grab it with your right hand, and slide it up along the length of the strap into the shooting position. When finished, return it to its resting position over your hip.
- During use, periodically check the D-ring to ensure it is tight in your camera's tripod thread and that the carabiner is in the locked position.

Care, Maintenance and Warranty

Your new camera strap requires little to no care to function properly under normal use. If dirty, it can be hand-washed in a mild detergent and rinsed. Blot it dry with a towel and allow to air dry fully. Do not dry it in a clothes dryer. It is your responsibility to check your S-Curve Camera Strap for proper operation before each use. Inspect it visually for any signs of damage or wear, especially on any sewn connections. Ensure the locking mechanism on the carabiner remains functional, and ensure the gasket material on the camera connection screw remains intact and makes contact with your camera every time you install it.

Danger Buddies LLC warrants this product for a period of 1-year against defects in materials or workmanship if the product fails during normal use. This warranty is limited to the original owner and covers repair or replacement of the S-Curve Camera Strap only, not incidental damage. Normal wear and tear is excluded. Always inspect your strap before use. Need warranty service? Email us at feedback@dangerbuddies.com.